

Uniden®

Modro 35

*For more exciting new products please visit our website:
Australia: www.uniden.com.au*

OWNER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- **This unit is NOT waterproof.** DO NOT expose this unit to moisture.
- DO NOT expose this unit to rain.
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

SAVE THESE INSTRUCTIONS!


WHAT'S IN THE BOX?




Modro 35 Base with Cordless Handset

Not Pictured:

- Rechargeable Battery
- Owner's Manual

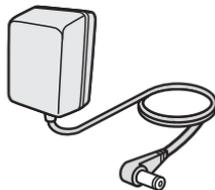

AC Adaptor

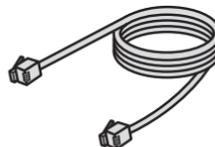

Telephone Cord

- If any item is missing or damaged, contact your place of purchase immediately. **Never use damaged products!**
- Need help? Get answers at our website: **www.uniden.com.au** for Australian model


CONTENTS

INSTALLING YOUR PHONE	5
GETTING TO KNOW YOUR PHONE	6
BASIC OPERATIONS	12
Base	12
Handset	12
MENU SETTING	14
Base	14
Phone Book	14
Call Log	16
Settings	16
Registration	18
Telephone Answering Machine (TAM)	19
Handset	23
Phone Book	23
Call Log	25
Base Setting	25
Hand Setting	26
Registration	30
Telephone Answering Machine (TAM)	30
SPECIAL FEATURES	34
Conversation Recording	34
Remote Access to the Answering Machine	34
Call Transfer	35
IMPORTANT INFORMATION	36
Solving Problems	36
ONE-YEAR LIMITED WARRANTY	38

INSTALLING YOUR PHONE

Charge the Battery for the Handset

1. Unpack handset and battery pack.
To remove the cover pull the battery cover down as shown in the figure.
2. Line up the battery connector with the jack inside the handset; the connector only fits one way.
3. Push the connector until it clicks into place; tug gently on the wires to make sure the battery is securely connected.
4. Replace the battery cover and slide it into place.
5. Use an AC Adaptor to connect the power jack on the base to a standard 240V AC power outlet.
6. Place the handset on the base to charge the handset.

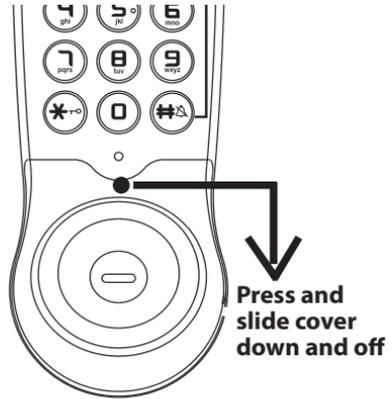

⚠ Charge the Handset completely (for 12 hours) before using it for the first time.

Connect the Power and Telephone Cords

Connect the telephone cord to the LINE jack on the bottom of the base.


Test the Connection

Pick up the handset and press . The handset sounds a dial tone and display shows *LINE IN USE*.

When you get a dial tone, make a quick test call.

GETTING TO KNOW YOUR PHONE


Base

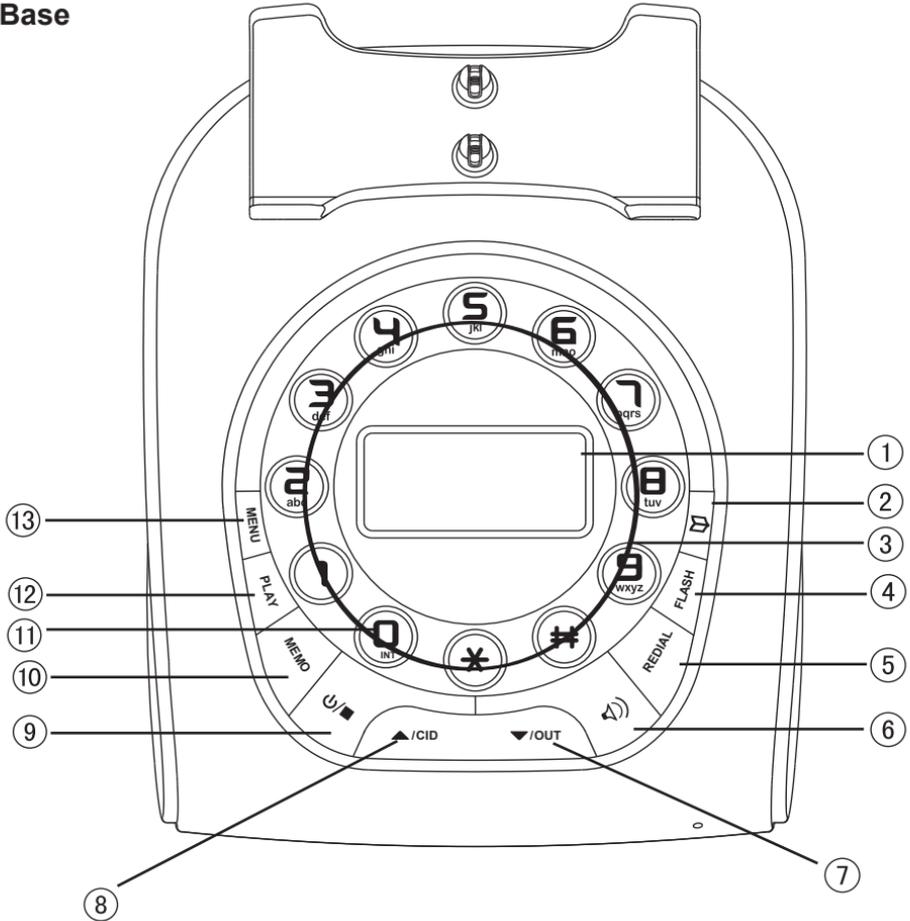

	Keys/Icon	What it does
1	LCD	Display
2	PHONE BOOK	In standby, press to view the phonebook.
3	Key Pad	

4	FLASH	<ul style="list-style-type: none"> • During a call: Press to switch to a waiting call. • When keying in the number, press to delete the last digit entered. • Press ▼ /OUT to view the dialled number list, then press FLASH to delete the numbers. • Press ▲ /CID to view the CID list, then press FLASH to delete the numbers. • In standby, press and hold to delete all old messages.
5	REDIAL	<ul style="list-style-type: none"> • Get the dial tone, press to dial the last dialled number. • When keying in numbers, press to insert a pause between the digits.
6	SPEAKER 🔊	<ul style="list-style-type: none"> • When a call comes in, press to answer the call. • In standby, press to get the dial tone.
7	▼ /OUT	<ul style="list-style-type: none"> • In the menu list, move one line down. • During a call, press to decrease the speakerphone volume. • In standby, press to view the dialled number list.
8	▲ /CID	<ul style="list-style-type: none"> • In the menu list, move one line up. • During a call, press to increase the speakerphone volume. • In standby, press to view the CID list.
9	🔌 / ■	<ul style="list-style-type: none"> • In standby, press and hold this key to turn on/off the answering machine. • When the answering machine is ON, press to select between OGM 1 or OGM2. • When playing messages, press to stop.
10	MEMO	In standby, press and hold to record a message.
11	INT	<ul style="list-style-type: none"> • Intercom - Press and hold to call the handset. • During a call, press and hold to initiate call transfer. (Refer to page 35 for details)
12	PLAY	<ul style="list-style-type: none"> • In standby, press to play recorded messages or memos. • While playing back the message, press to insert a pause.
13	MENU	<ul style="list-style-type: none"> • In standby, press to view the menu list. • In the menu list, press to confirm a selection. • During a call, press to mute/unmute a conversation.


Handset

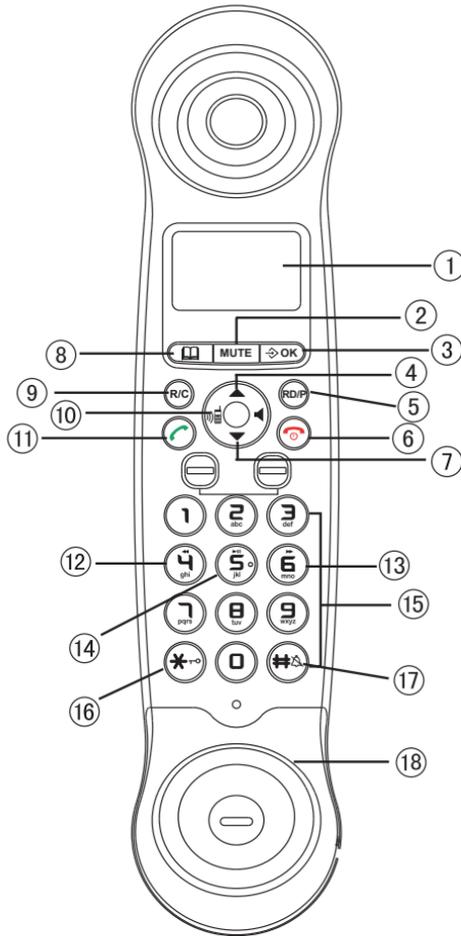

	Keys/Icon	What it does
1	LCD	Display
2	MUTE	During a call, press to mute/unmute the microphone.
3	SET/OK	<ul style="list-style-type: none"> In standby, press to view the menu list. In the menu list, press to confirm a selection.
4	UP	<ul style="list-style-type: none"> In the menu list, move one line up. During a call, press to increase the earpiece volume. In standby, press to view the CID list.


5	RD/P	<ul style="list-style-type: none"> • Press to insert a PAUSE while keying in numbers. • Get the dial tone, then press to dial the last dialled number.
6	POWER/ END	<ul style="list-style-type: none"> • Press to end call. • Press and hold to turn off/on the handset.
7	DOWN	<ul style="list-style-type: none"> • In the menu list, move one line down. • During a call, press to decrease the earpiece volume. • In the on-hook state, press to view the dialled number list.
8	PHONE BOOK 	<ul style="list-style-type: none"> • In standby, press to view the contact list.
9	R/C (Flash/ Delete)	<ul style="list-style-type: none"> • When keying in the number, press to delete the last digit entered. • Press ▲ to view the CID list, then press R/C to delete the numbers. • Press ▼ to view the dialled number list, then press R/C to delete the numbers.
10	INTERCOM 	<ul style="list-style-type: none"> • Press to call the base. • After having answered a call, press to transfer the incoming call to the base.
11	CALL	Press to answer a call, get a dial tone or dial out a number.
12	 (<<)	<ul style="list-style-type: none"> • While playing messages, press to rewind to the previous message.
13	 (>>)	<ul style="list-style-type: none"> • While playing messages, press to skip forward to the next message.
14	 (>)	<ul style="list-style-type: none"> • In standby, press and hold to play messages. • While playing messages, press to pause.
15	Key Pad	
16		<ul style="list-style-type: none"> • Press and hold to lock/unlock the keypad.
17		<ul style="list-style-type: none"> • Press and hold to mute/unmute the ringer.
18	Battery Cover	

Base LCD Display

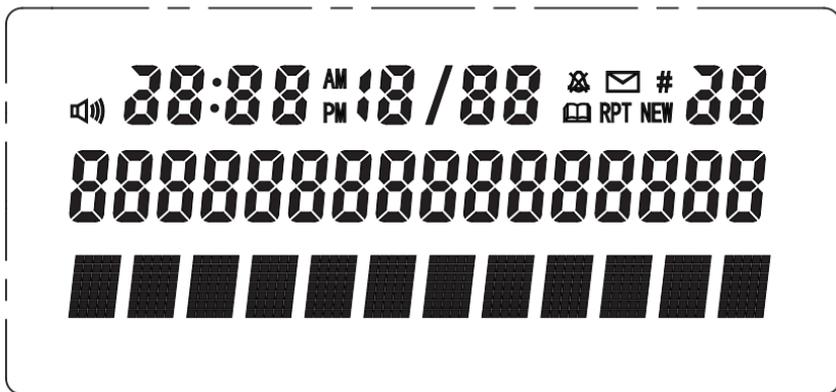

Icon	What it means
	The ringer is turned off.
	Phonebook
	Voice message waiting.
RPT	Indicates that the same call has been received more than once.
NEW	Indicates a new call has come in but not been viewed.
#	Appears along with a digit to indicate the sequence of the calls in the dialled or the CID list.
	Speakerphone is on.

Handset LCD Display

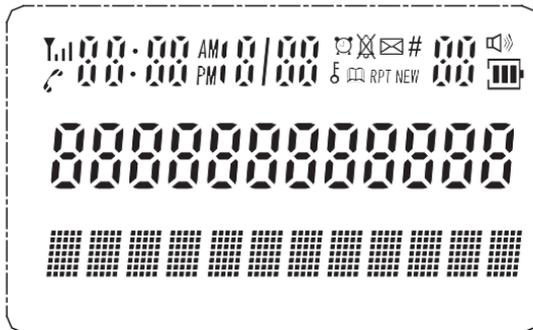

Icon	What it means
	Indicates the signal strength. It flashes when the registration to the base is lost.
	Talk mode
	Handset keypad is locked.
	Indicates alarm on. Flashes when triggered.
	Ringer off
	Phonebook
	Voice message waiting
RPT	Indicates that the same call has been received more than once.
NEW	Indicates a new call has come in but not been viewed.
#	Appears along with a digit to indicate the sequence of the calls in the dialled or the CID list.
	Battery status

BASIC OPERATIONS

BASE

Make a Call

1. Press . The LCD will display  and it will also show, *LINE IN USE*.
2. Use the key pad to enter the number you wish to dial.
Press FLASH to delete the last digit entered or press and hold FLASH to delete all digits.
3. When you have finished, press  to end the call.

Answer a Call

When a call comes in, press .

Redial

Press  and then press REDIAL to dial out the last dialed number.

Mute

During a call, to mute the microphone press MENU and the LCD will display *MUTE*. The other party will not be able to hear you.

Speakerphone Volume

While making a call, press /CID to increase or /OUT to decrease the speakerphone volume.

HANDSET

Make a Call

1. In the standby mode, use the key pad to dial the desired number. If you make a mistake, press R/C to clear the digits one by one. To clear all digits, press .
2. Press  the LCD displays '*LINE IN USE*', the number will dial out.
3. If you wish to use the speakerphone, press  and the  will appear on the top right-hand corner of the LCD.
4. When you finish, press .

Answer a Call

When a call comes in, press  or 

Redial

Press  or  and then press RD/P to dial out the last dialled number.

Mute

During a call, to mute the microphone, press MUTE and the LCD will display *MUTE*. The other party will not be able to hear you.

MENU SETTING

BASE

Using the Base Menu

With the phone in standby, press MENU to access the Menu setting.

Press ▲/CID or ▼/OUT to scroll through the MENU list.

Press MENU to select a setting.

Press ⏏ to quit the current setting.

PHONE BOOK

The base has its own phonebook. There are 50 phonebook memories that can be viewed and dialled out. Press MENU to open the list and the option *PHONE BOOK* displays. Press MENU again to confirm and enter that setting.

LIST

Press MENU to enter and review the contact list. Press ▲/CID or ▼/OUT to scroll through the list.

NEW ENTRY

Use this option to enter and save contact details in the phone book.

1. Enter the Phone Book menu and press ▲/CID or ▼/OUT to select NEW ENTRY and press MENU to confirm and the cursor will display on the LCD.
2. Use the alpha-numeric key pad to enter the name and press MENU to confirm and move to the digits.
3. Enter the digits using the key pad and press MENU to confirm.
4. Press FLASH to delete a letter or digit while editing the contact details in the phonebook.
5. The LCD displays *MELODY 1*. Use ▲/CID or ▼/OUT to scroll through the options and to confirm, press MENU. You will hear a confirmation tone and the LCD will return to NEW ENTRY.

EDIT RECORD

Use this option to modify a phone book record.

1. Enter the Phone Book menu and press ▲/CID or ▼/OUT to select EDIT RECORD and press MENU to confirm. The first phonebook entry will display.
2. Press ▲/CID or ▼/OUT to select the desired contact number.
3. Press MENU and the cursor will appear next to the name.

4. Press FLASH to delete the letters, then use the key pad to edit and MENU to confirm.
5. The cursor now appears at the end of the number, press FLASH to delete the digits the use the key pad to edit and press MENU to confirm.

DEL RECORD

Use this option to delete a phone book record.

1. Enter the Phone Book menu and press ▲/CID or ▼/OUT to select DEL RECORD and press MENU to confirm. The first contact will display on the LCD.
2. Use ▲/CID or ▼/OUT to scroll through the list until you reach the desired number, then press MENU to delete. The LCD will display *CONFIRM?*
3. Press MENU again to confirm.

DELETE ALL

Use this option to delete all the phone book records.

1. Enter the Phone Book menu and press ▲/CID or ▼/OUT to select DELETE ALL and press MENU to confirm the selection.
2. The LCD will display *CONFIRM?* Press MENU again to confirm. All the phone book records will be deleted.

MEM STATUS

Use this option to view the phone book memory status. You can store up to 50 contact numbers.

1. Enter the Phone Book menu and press ▲/CID or ▼/OUT to select MEM status and press MENU to confirm the selection.
2. The LCD will display the memory available in the phone book. For example, if you have saved 30 contacts in your phone book, it will display 30/50.

To store a number from the CID or Dialed list into your Phone Book

1. Use ▲/CID or ▼/OUT to scroll through the CID/dialed list, and when you have reached the desired number, press MENU and the LCD will display *ADD TO PB?* Press MENU to confirm.
2. The cursor will display on the LCD. Key in the name and press MENU to confirm. The cursor will now display near the number, edit, if needed, using the key pad or delete using FLASH.
3. Press MENU to select the melody and confirm.

The unit saves the information for the last 20 dialed numbers and 30 received calls.

Making calls from Phone Book

1. In the standby mode, press **☰** to open the phone book.
2. Press **▲/CID** or **▼/OUT** to scroll through the list to select the desired name and press **⏻** to dial out.

CALL LOG

1. Press MENU to enter the settings and press either **▲/CID** or **▼/OUT** to select CALL LOG.
2. Press MENU to confirm and enter the CALL LOG setting. Press **▲/CID** or **▼/OUT** to scroll through MISSED, RECEIVED or DIALLED list.
3. Select the desired list and press MENU to confirm. Press **▲/CID** or **▼/OUT** to scroll through the list. If the list is empty, the LCD will display *EMPTY*.
4. Select the displayed number on the LCD and Press MENU. Press **▲/CID** or **▼/OUT** to view the options available - ADD TO PB?, DELETE?, DELETE ALL?.
5. Select the desired option and press MENU to confirm.

ADD TO PB: Use this option to add an entry to the phone book.

DELETE: Use this option to delete an entry.

DELETE ALL: Use this option to delete all numbers.

SETTINGS

Press MENU to enter the settings and press either **▲/CID** or **▼/OUT** to scroll through and select SETTINGS. Press MENU to confirm.

The first option, *DELETE HS* displays on the LCD.

DELETE HS

This options allows you to delete the HS registered to the base.

1. When the LCD displays *DELETE HS*, press MENU to confirm.
2. The LCD will display, *PIN?*
3. Enter the correct 4-digit pin (default pin: 0000) and press MENU to confirm.
4. If you have more than one handset registered to the base, press **▲/CID** or **▼/OUT** to scroll through the list and select the desired handset.
5. Press MENU to confirm.
The selected handset will not be registered to the base.

RING SETUP

This options allows you to change ringer tones.

1. Enter the SETTINGS menu and press ▲/CID or ▼/OUT to scroll through the list and select RING SETUP. Press MENU to confirm.
2. Press ▲/CID or ▼/OUT to select between INT RING and EXT RING.
3. Press MENU to confirm.
4. Press ▲/CID or ▼/OUT to select bewteen MELODY and VOLUME.
5. Press MENU to confirm either of the options (MELODY or VOLUME).
6. Depending on your selection, press ▲/CID or ▼/OUT to scroll through and select the desired melody or the ringer volume level.
7. Press MENU to confirm.

FLASH TIME

1. Enter the SETTINGS menu and press ▲/CID or ▼/OUT to scroll through the list and select FLASH. Press MENU to confirm.
2. Press ▲/CID or ▼/OUT to select from the available options to meet your telephone requirement (Default for Australia is 100).
3. Press MENU to confirm.

KEY TONE

This options allows you to enable or disable the beep sound when a button is pressed.

1. Enter the SETTINGS menu and press ▲/CID or ▼/OUT to scroll through the list and select KEY TONE. Press MENU to confirm.
2. Press ▲/CID or ▼/OUT to select between ON and OFF.
3. Press MENU to confirm.

LANGUAGE

This options allows you to set the language. Default is english.

1. Enter the SETTINGS menu and press ▲/CID or ▼/OUT to scroll through the list and select LANGUAGE. Press MENU to confirm.
2. Press ▲/CID or ▼/OUT to select from the various options.
3. Press MENU to confirm.

DATE & TIME

This options allows you to set the date and time.

1. Enter the SETTINGS menu and press ▲/CID or ▼/OUT to scroll through the list and select DATE & TIME. Press MENU to confirm.

2. The date and time is displayed on the LCD , and the last 2 digits of the year flashes.
3. Press ▲/CID or ▼/OUT to edit and press MENU to confirm.
4. Follow the same procedure to edit the day and month and time setting and press MENU to confirm.

MODIFY PIN

Some functions require a PIN code. The default PIN is 0000, but you can change it to your personal 4-digit PIN.

1. Enter the SETTINGS menu and press ▲/CID or ▼/OUT to scroll through the list and select MODIFY PIN. Press MENU to confirm.
2. The LCD displays, *PIN?* Use the key pad to enter the default pin (0000) and press MENU to confirm.
3. The LCD displays, *NEW PIN*, use key pad to enter the new pin and press MENU to confirm.
4. The LCD will display, *REPEAT*, use the key pad to enter the new pin again and press MENU to confirm.

BS DEFAULT

Use this option to change the base setting back to the default setting.

1. Enter the SETTINGS menu and press ▲/CID or ▼/OUT to scroll through the list and select BS DEFAULT. Press MENU to confirm.
2. The LCD displays, *PIN?* Use the key pad to enter the pin (default pin: 0000) and press MENU to confirm.
3. If the PIN is correct, all the base settings will return to the factory default settings.

REGISTRATION

The handset supplied with the base is already registered. You do not have to register it again.

To check whether a handset is registered, power on the unit and ensure that the handset is within the range of the base. The handset's display should show a number, (for example, HS 1 or HS 2) and the icon for signal strength displayed on the LCD would show three bars.

If the handset unregistered, you need to register the handset following the steps given.

 **You need to operate the base and handset together.**

1. On the base, press MENU. Press ▲/CID or ▼/OUT to scroll and select REGISTRATION and press MENU to confirm. The LCD will display *SEARCHING*.
2. Meanwhile, on the handset, press SET/OK and use ▲ or ▼ to scroll through the menu list and choose REGISTRATION.
3. Press SET/OK to see BASE 1. (If the handset already has been registered to a base, a “+” sign will be displayed next to BASE 1.)
4. Press SET/OK, the display will show *PIN?*, key in the 4 digit PIN for the base (the default PIN is 0000)
5. Press SET/OK to confirm, and the display will show, *SEARCHING 1* (or 2,3,4).
6. When registered, you will hear a confirmation tone.

TAM (TELEPHONE ANSWERING MACHINE)

The TAM can record messages from callers or memos directly at the base. Each message or memo can be up to 2 minutes long, and the total recording time available for all messages/memos is about 60 minutes.

MESSAGE

1. On the base press MENU. Press▲/CID or ▼/OUT to scroll and select TAM. Press MENU to confirm.
2. The first option MESSAGE is displayed on the LCD. Press MENU to confirm.
3. Press MENU again enter the setting and listen to recorded messages or memos.

DELETE ALL

1. On the base press MENU. Press ▲/CID or ▼/OUT to scroll and select TAM. Press MENU to confirm.
2. Press ▲/CID or ▼/OUT to scroll through the options and select DELETE ALL, then press MENU to enter, the LCD will display *CONFIRM?*
3. Press MENU to confirm and you will hear the message, *'All messages deleted'*.

✗ **You cannot delete a New Message. You will have to play that message and then delete it.**

MEMO

This allows users to record memo for up to 2 minutes.

1. On the base, press MENU. Press ▲/CID or ▼/OUT to scroll and select TAM. Press MENU to confirm.

2. Press ▲/CID or ▼/OUT to scroll through the options and select MEMO. Press MENU to confirm and enter, the LCD will display *MEMO* and you will hear a message, *'Please record memo after the beep.'*
3. The LCD will display *RECORD* and the recording time. To stop recording, press ⏻/■ to stop recording.

🔇 In standby, press **PLAY** to listen to the recorded memos or messages.

🔇 In standby, press and hold **MEMO** to start the recording.

TAM SETTINGS

1. On the base, press MENU. Press ▲/CID or ▼/OUT to scroll and select TAM. Press MENU to confirm.
2. Press ▲/CID or ▼/OUT to scroll through the options and select TAM Settings. Press MENU to confirm and enter, the LCD will display *TAM ON/OFF*.

TAM ON/OFF

1. Press MENU again, the LCD will display either *ON* or *OFF*. Press ▲/CID or ▼/OUT to toggle between the two options and to confirm, press MENU.
2. If you select the option, *ON*, the LCD will display *OGM 1*. Press ▲/CID or ▼/OUT to toggle between the two options (*OGM 1* or *OGM 2*) and to confirm, press MENU.

SET OGM

1. Enter the TAM settings menu and press ▲/CID or ▼/OUT to scroll and select SET OGM. Press MENU to confirm.
2. The LCD will display *OGM 1*.
3. Press ▲/CID or ▼/OUT to toggle between the two options (*OGM 1* or *OGM 2*) and to confirm, press MENU.
4. The LCD will display, *PLAY*. Press ▲/CID or ▼/OUT to toggle between the options (*PLAY*, *RECORD*, *DEFAULT*). Press MENU to confirm.

Playback

When the LCD displays *PLAY*, press MENU to select and to play the OGM1

a) The pre-set announcement for OGM 1, *'Sorry we cannot answer your call now, please leave your message after the beep.'*

b) The pre-set announcement for OGM 2, *'Sorry we cannot answer your call now, please call later.'* If the announcement is set to OGM 2, then the caller cannot leave a message.

Record

When the LCD displays *RECORD*, press MENU to hear a voice prompt, 'please record new announcement after the beep.' After the beep tone, you can start recording. Press /■ to stop recording.

Default

When the LCD displays *DEFAULT*, press MENU to confirm, the LCD will display *CONFIRM?*. Press MENU to confirm and the OGM will be set to default.

TAM Alert

1. Enter the TAM settings menu and press ▲/CID or ▼/OUT to scroll and select TAM ALERT. Press MENU to confirm.
2. The LCD will display *ON* or *OFF*.
3. Press ▲/CID or ▼/OUT to toggle between the two options (ON or OFF) and to confirm, press MENU.

 **If you set the option ON, when you have a new message, then you will hear a tone every 60 secs in the standby mode.**

SET RING

You can set the number of rings before the system answers.

1. Enter the TAM settings menu and press ▲/CID or ▼/OUT to scroll and select SET RING. Press MENU to confirm.
2. The LCD will display the default setting (5 Rings).
3. Press ▲/CID or ▼/OUT to scroll through the options and to confirm, press MENU.

 **Toll Saver makes the system answer after 2 rings if you have new messages or after 5 rings if you don't.**

TAM PIN

1. Enter the TAM settings menu and press ▲/CID or ▼/OUT to scroll and select TAM PIN. Press MENU to confirm.
2. The LCD will display the default PIN 0000. Use keypad to enter the new PIN and press MENU to confirm.

TAM DEFAULT

1. Enter the TAM settings menu and press ▲/CID or ▼/OUT to scroll and select TAM DEFAULT. Press MENU to confirm.
2. The LCD will display *PIN?* Use key pad to enter the PIN and press MENU to confirm.

The TAM Settings will return to the default settings.

HANDSET

Using the Handset Menu

With the phone in standby, press SET/OK to access the Menu setting.

Press ▲/CID or ▼/OUT to scroll through the MENU list.

Press SET/OK to select a setting.

Press  to quit current setting.

Press  to quit the setting.

PHONE BOOK

The handset has its own phone book, independent of the base, with a maximum of 50 entries. The contact name can have a maximum of 12 characters and the number a maximum of 20 digits.

LIST

1. Press SET/OK.
2. Use ▲ or ▼ to scroll through the menu list and select PHONE BOOK. Press SET/OK to confirm.
3. The LCD will display *LIST*. Press SET/OK and the LCD will display the first phone book entry. If there are no entries the LCD will display *EMPTY*.
4. Press ▲ or ▼ to view all the phone book entries.

In the standby mode, press  and the LCD will display the first entry in the phonebook. Press ▲ or ▼ to scroll through the list. Press a letter or a numerical key to jump to a particular entry and scroll through the list.

NEW ENTRY

1. Enter the phone book setting and press ▲ or ▼ to scroll through the list and select NEW ENTRY. Press SET/OK to confirm.
2. The cursor is displayed on the LCD. Enter the contact name using the keypad. Press SET/OK.
3. Next, enter the contact number and press SET/OK to confirm.
4. The LCD displays, *MELODY 1*. Press ▲ or ▼ to scroll through the list and select the desired ring tone. Press SET/OK to confirm.
The new entry is saved in the phone book.

EDIT RECORD

1. Enter the phone book setting and press ▲ or ▼ to scroll through the list and select EDIT RECORD. Press SET/OK to confirm. The first phone book entry is displayed on the LCD.

2. Press ▲ or ▼ to scroll through the list and select the desired number.
3. Press SET/OK and the cursor will flash at the end of the contact name. Use R/C to delete the letters and the key pad to enter the characters.
4. Press SET/OK to confirm and the cursor will appear near the digits. Use R/C to delete the digits and the key pad to enter the digits.
5. Press SET/OK to confirm and MELODY 1 is displayed on the screen. Use ▲ or ▼ to scroll through and change the ring tone if desired.

DEL RECORD

1. Enter the phone book setting and press ▲ or ▼ to scroll through the list and select DEL RECORD. Press SET/OK to confirm. The first phone book entry is displayed on the LCD.
2. Press ▲ or ▼ to scroll through the list and select the desired number.
3. Press SET/OK to confirm and the LCD will display *CONFIRM?*.
4. Press SET/OK again to confirm.

DELETE ALL

1. Enter the phone book setting and press ▲ or ▼ to scroll through the list and select DELETE ALL?. Press SET/OK to confirm.
2. The LCD will display *CONFIRM?*.
3. Press SET/OK again to confirm. All the phone book entries will be deleted.

MEM STATUS

1. Enter the phone book setting and press ▲ or ▼ to scroll through the list and select MEM STATUS. Press SET/OK to confirm.
2. The LCD will display the phone book memory space that has been used. For example, if there are 3 contact numbers it will display as 3/50.

To store a number from the CID or Dialed list into your Phone Book

1. Use ▲ or ▼ to scroll through the CID/dialed list, and when you have reached the desired number, press SET/OK and the LCD will display *ADD TO PB?*. Press SET/OK to confirm.
2. The cursor will display on the LCD. Key in the name and press MENU to confirm. The cursor will now display near the number, edit, if needed, using the key pad or R/C to delete.
3. Press MENU to select the melody and confirm.

CALL LOG

1. Press SET/OK to enter the menu settings and press ▲ or ▼ to select CALL LOG.
2. Press SET/OK to confirm and enter the CALL LOG setting. Press ▲ or ▼ to scroll through MISSED, RECEIVED or DIALLED list.
3. Select the desired list and press MENU to confirm. Press ▲ or ▼ to scroll through the list. If the list is empty, the LCD will display *EMPTY*.
4. Select the displayed number on the LCD by pressing SET/OK. Press ▲ or ▼ to view the options available - ADD TO PB?, DELETE?, DELETE ALL?.
5. Press MENU to confirm:
ADD TO PB: Use this option to add an entry to the phone book.
DELETE: Use this option to delete an entry.
DELETE ALL: Use this option to delete all numbers.

BASE SETTING

DELETE HS

This option allows you to delete the HS registered to the base.

1. Enter the BASE SETTING menu and press ▲ or ▼ to select DELETE HS, press SET/OK to confirm.
2. The LCD will display, *PIN?*
3. Enter the correct 4-digit pin (default pin: 0000) and press SET/OK to confirm.
4. If you have more than one handset registered to the base, press ▲ or ▼ to scroll through the list and select the desired handset.
5. Press SET/OK to confirm, the selected handset will not be registered to the base.

✗ **After you have deleted the handset from the base, you cannot enter the base setting menu on the handset in the standby mode.**

FLASH TIME

1. Enter the BASE SETTING menu and press ▲ or ▼ to select FLASH TIME, press SET/OK to confirm.
2. Press ▲ or ▼ to scroll and select from the available options to meet your telephone requirement (Default for Australia is 100).
3. Press SET/OK to confirm.

MODIFY PIN

Some functions require a PIN code. The default PIN is 0000, but you can change it to your personal 4-digit PIN.

1. Enter the BASE SETTING menu and press ▲ or ▼ to select MODIFY PIN, press SET/OK to confirm.
2. The LCD displays, *PIN?* Use the key pad to enter the default pin (0000) and press SET/OK to confirm.
3. The LCD displays, *NEW PIN*, use key pad to enter the new pin and press SET/OK to confirm.
4. The LCD will display, *REPEAT*, use the key pad to enter the new pin again and press SET/OK to confirm.

BS DEFAULT

Some functions require a PIN code. The default PIN is 0000, but you can change it to your personal 4-digit PIN.

1. Enter the BASE SETTING menu and press ▲ or ▼ to select BS DEFAULT, press SET/OK to confirm.
2. The LCD displays, *PIN?* Use the key pad to enter the pin (default pin: 0000) and press SET/OK to confirm.
3. If the PIN is correct, the base settings will return to the factory default settings.

HANDSET SETTING

1. Press SET/OK to enter the menu settings and press ▲ or ▼ to select HS SETTINGS.
2. Press SET/OK to confirm and enter the HS SETTINGS. The first option, *ALARM* is displayed on the LCD.

ALARM

1. Press SET/OK to confirm and press ▲ or ▼ to toggle between the options ON and OFF.
2. Press SET/OK to select ON, the default time will flash on the screen. Press ▲ or ▼ to change the timings and press SET/OK to confirm.
3. The LCD will display *SNOOZE ON*. Press ▲ or ▼ to toggle between the options SNOOZE ON or SNOOZE OFF. Select either one and press SET/OK to confirm.
The alarm icon will be displayed on the LCD.

- In the standby mode, the alarm will ring at the time you set.
- When the alarm is triggered, press any key to turn it off. If a call comes through at that time, the alarm will automatically turn off.
- To turn it off, re-enter the setting and turn it off.
- If the SNOOZE is set ON, the alarm will be repeated every 5 minutes around 9 times. The alarm icon will flash continuously on the LCD. When the alarm goes off, press any key, except  to turn it off temporarily. The alarm will set off again in 5 minutes.
- If the SNOOZE is set OFF, the alarm will sound only once for 45 seconds.

RING SETUP

This options allows you to change ringer tones.

1. Enter the HS SETTINGS menu and press ▲ or ▼ to scroll through the list and select RING SETUP. Press SET/OK to confirm.
2. Press ▲ or ▼ to select between INT RING and EXT RING.
3. Press SET/OK to confirm.
4. Press ▲ or ▼ to select between MELODY and VOLUME.
5. Press SET/OK to confirm either of the options (MELODY or VOLUME).
6. Depending on your selection, press ▲ or ▼ to scroll through and select the desired melody or the ringer volume level.
7. Press SET/OK to confirm.

TONE SETTING

This option allows you to enable or disable the beep sound when a button is pressed and when the battery or range is low.

1. Enter the HS SETTINGS menu and press ▲ or ▼ to scroll through the list and select TONE SETTING. Press SET/OK to confirm.
2. Press ▲ or ▼ to select between the options (KEY TONE, BATTERY LOW, RANGE ALARM).
3. Select any one and press SET/OK to confirm.
4. Press ▲ or ▼ to toggle between the options (ON or OFF) to turn on or off the tone for that particular setting and press SET/OK to confirm.

LANGUAGE

This options allows you to set the language. Default is english.

1. Enter the HS SETTINGS menu and press ▲ or ▼ to scroll through the list and select LANGUAGE. Press SET/OK to confirm.
2. Press ▲ or ▼ to select from the various options.
3. Press SET/OK to confirm.

HS NAME

This options allows you to set a display name.

1. Enter the HS SETTINGS menu and press ▲ or ▼ to scroll through the list and select HS NAME. Press SET/OK to confirm.
2. Use the keypad to enter a name. If you want to delete a character, press R/C.
3. Press SET/OK to confirm.

AUTO ANSWER

Use this option to answer a call by picking up the handset from the cradle without pressing any buttons.

1. Enter the HS SETTINGS menu and press ▲ or ▼ to scroll through the list and select AUTO ANSWER. Press SET/OK to confirm.
2. Press ▲ or ▼ to toggle between ON or OFF.
3. Choose the desired option and press SET/OK to confirm.

BARRING

Use this option to disable outgoing calls beginning with the programmed digits.

1. Enter the HS SETTINGS menu and press ▲ or ▼ to scroll through the list and select BARRING. Press SET/OK to confirm.
2. The LCD will display, *PIN?*
3. Enter the default PIN (0000) using the keypad and press SET/OK.
4. Press ▲ or ▼ to toggle between ON or OFF.
5. If you choose ON, the LCD will display *NUMBER 1*. Press SET/OK to confirm.
6. Use the keypad to enter the desired digits (maximum 4 digts) and press SET/OK to confirm.

Numbers begining with those programmed digits will not be dialled out.

DATE & TIME

This options allows you to set the date and time.

1. Enter the HS SETTINGS menu and press ▲ or ▼ to scroll through the list and select DATE & TIME. Press SET/OK to confirm.
2. The date and time is displayed on the LCD , and the last 2 digits of the year flashes.
3. Press ▲ or ▼ to edit and press SET/OK to confirm.
4. Follow the same procedure to edit the day and month and time setting and press SET/OK to confirm.

SELECT BASE

This handset can be registered to more than one base.

1. Enter the HS SETTINGS menu and press ▲ or ▼ to scroll through the list and select SELECT BASE. Press SET/OK to confirm.
2. The LCD displays *BASE 1 +*. Press ▲ or ▼ to select base (BASE 1~4) or AUTO. Press SET/OK to confirm.
If you select AUTO, the handset will link with the first available base.
3. Press SET/OK to begin searching. If successful, you will hear a confirmation tone.

HS DEFAULT

This option restores the handset settings to the factory default settings.

1. Enter the HS SETTINGS menu and press ▲ or ▼ to scroll through the list and select HS DEFAULT. Press SET/OK to confirm.
2. The LCD displays, *PIN?* Use the key pad to enter the pin (default pin: 0000) and press SET/OK to confirm.
3. If the PIN is correct, all the handset settings will return to the factory default settings.

REGISTRATION

The handset supplied with the base is already registered. You do not have to register it again.

To check whether a handset is registered, power on the unit and ensure that the handset is within the range of the base. The handset's display should show a number, (for example, HS 1 or HS 2) and the icon for signal strength displayed on the LCD should show three bars.

If the handset unregistered, you need to register the handset following the steps below.

You need to operate the base and handset together.

1. On the handset, press SET/OK and use ▲ or ▼ to scroll through the menu list and choose REGISTRATION.
2. On the base, press MENU. Press ▲/CID or ▼/OUT to scroll and select REGISTRATION and press MENU to confirm. The LCD will display *SEARCHING*.
3. Press SET/OK to see BASE 1. (If the handset already has been registered to a base, a "+" sign will be displayed next to BASE 1.)
4. Press SET/OK, the display shows *PIN?*, key in the 4 digit PIN for the base (the default PIN is 0000)
5. Press SET/OK to confirm, and the display will show, *SEARCHING 1* (or 2,3,4).
6. When registered, you will hear a confirmation tone.

TAM (TELEPHONE ANSWERING MACHINE)

The TAM can record messages from callers or memos directly at the base. Each message or memo can be up to 2 minutes long, and the total recording time available for all messages/memos is about 60 minutes.

MESSAGE

1. On the handset press SET/OK. Press ▲ or ▼ to scroll and select TAM. Press SET/OK to confirm.
2. The first option MESSAGE is displayed on the LCD. Press SET/OK to enter the setting and listen to recorded messages.

Use the keypad for shortcuts detailed below:

- Press 2 - To delete the message that is currently being played
- Press 4 - To skip to the previous message

- Press 5 - To pause and restart the current message.
Press 5 again within 60 seconds otherwise it will exit from the message playback mode.
 - Press 6 -- To skip forward to the next message
 - Press 8 -- To stop the message play back
- ✗ **In the standby mode, press and hold 5 to play messages, press 4 to go to the previous message and 6 to skip to the next message.**

DELETE ALL

1. On the handset press SET/OK. Press ▲ or ▼ to scroll and select TAM. Press SET/OK to confirm.
 2. Press ▲ or ▼ to scroll through the options and select DELETE ALL, then press SET/OK to enter, the LCD will display *CONFIRM?*.
 3. Press SET/OK to confirm and you will hear the message, '*All messages deleted*'.
- ✗ **You cannot delete a New Message. You will have to play that message and then delete it.**

MEMO

This allows users to record memo of up to 120 seconds.

1. On the handset press SET/OK. Press ▲ or ▼ to scroll and select TAM. Press SET/OK to confirm.
2. Press ▲ or ▼ to scroll through the options and select MEMO. Press SET/OK to confirm and enter, the LCD will display *MEMO* and you will hear a message, '*Please record memo after the beep.*'
3. The LCD will display *RECORD* and the recording time. To stop recording, press SET/OK.

TAM SETTINGS

1. On the handset, press SET/OK. Press ▲ or ▼ to scroll and select TAM. Press SET/OK to confirm.
2. Press ▲ or ▼ to scroll through the options and select TAM SETTINGS. Press SET/OK to confirm and enter, the LCD will display *TAM ON/OFF*.

TAM ON/OFF

1. Press SET/OK again, the LCD will display either *ON* or *OFF*. Press ▲ or ▼ to toggle between the two options and to confirm, press SET/OK.
2. If you select the option, *ON*, the LCD will display *OGM 1*. Press ▲ or ▼ to toggle between the two options (*OGM 1* or *OGM 2*) and to confirm, press SET/OK.

SET OGM

1. Enter the TAM settings menu and press ▲ or ▼ to scroll and select SET OGM. Press SET/OK to confirm.
2. The LCD will display *OGM 1*.
3. Press ▲ or ▼ to toggle between the two options (OGM 1 or OGM 2) and to confirm, press SET/OK.
4. The LCD will display, *PLAY*. Press ▲ or ▼ to toggle between the options (Play, Record, Default). Press SET/OK to confirm.

Playback

When the LCD displays *PLAY*, press SET/OK to select and to play the OGM1

- a) The pre-set announcement for OGM 1, *'Sorry we cannot answer your call now, please leave your message after the beep'*.
- b) The pre-set announcement for OGM 2, *'Sorry we cannot answer your call now, please call later'*.

Record

When the LCD displays *RECORD*, press SET/OK to hear a voice prompt, *'please record new announcement after the beep.'* After the beep tone, you can start recording. Press SET/OK to stop recording.

Default

When the LCD displays *DEFAULT*, press SET/OK to confirm, the LCD will display CONFIRM?. Press SET/OK to confirm and the OGM will be set to default.

SET RING

You can set the number of rings before the system answers.

1. Enter the TAM settings menu and press ▲ or ▼ to scroll and select SET RING. Press SET/OK to confirm.
2. The LCD will display the default setting (5 Rings).
3. Press ▲ or ▼ to scroll through the options and to confirm, press SET/OK.

☒ **Toll Saver makes the system answer after 2 rings if you have new messages or after 5 rings if you don't.**

TAM PIN

1. Enter the TAM settings menu and press ▲ or ▼ to scroll and select TAM PIN. Press SET/OK to confirm.
2. The LCD will display the default PIN 0000. Use key pad to enter the new PIN and press SET/OK to confirm.

TAM DEFAULT

1. Enter the TAM settings menu and press ▲ or ▼ to scroll and select TAM DEFAULT. Press SET/OK to confirm.
2. The LCD will display *PIN?* Use key pad to enter the PIN and press SET/OK to confirm.

The TAM Settings will return to the default settings.

SPECIAL FEATURES

Conversation Recording Handset

1. When you are having a conversation, press and hold **#**  until the LCD displays, *RECORD*. You can continue your conversation and now it will be recorded.
2. To stop recording, press and hold **#**  again.

Conversation recorded would be stored like a message and can be played back or deleted along with other messages. The duration of the recording will depend on the storage space (60 mins) left in the TAM.

Base

1. When you are having a conversation, press and hold **MEMO** until the LCD displays, *RECORD*. You can continue your conversation and now it will be recorded.
2. To stop recording, press and hold **U/■** .

Conversation recorded would be stored like a message and can be played back or deleted along with other messages. The duration of the recording will depend on the storage space (60 mins) left in the TAM.

Remote Access to the Answering Machine

Call your number and wait till the system answers.

Press * key and you will hear a voice prompt asking you to enter the security code (default 0000).

If the security code is correct, then the system announces the number of messages and the time of the message.

When the messages are playing you can press the following keys:

2	Delete message
4	Skip back to previous message
5	Pause/Play
6	Jump forward to the next message
8	Stop Playback

When you are not playing messages in the remote mode, press the following keys:

1	Play the main menu
5	Play Messages
7	Switch between OGM 1 and OGM2
9	Turn TAM off

Call Transfer

Transfer a call from the base to cordless handset or vice versa.

Transfer the call from the base to the cordless handset

1. During a call, press and hold  on the base. The external call will be put on hold. If the base has only one cordless handset registered it will immediately start calling that handset, but if more than one handset is registered, enter the number of the handset you want to transfer the call to. The desired handset will ring.
2. Press  or  on the handset to answer the call. Then the cordless handset and the base will be connected. To complete the call transfer, press  on the base. Now the cordless handset will be connected to the external call.

Transfer the call from the cordless handset to the base

1. When you've made or answered an external call, to transfer it to another handset or to the base, press the  key in the number of the handset or the base (the number of the base is "0") you want to transfer the call to. If only one handset registered with a base, just press  key. The external call will be put on hold.
2. When the other handset or base answers, press  key of the initiating handset to transfer the external call to the other handset or base.
3. If the other handset or base does not answer, you can get back to the external call by pressing  key again or you will automatically be reconnected to the outside call after 30 seconds.

IMPORTANT INFORMATION

Solving Problems

If you have any trouble with your phone, check this section first. If you need help, visit the customer support page of our website listed on the front cover.

General Problems	Possible Solutions
Blank or faint screen Caller ID will not work properly Phone will not ring	<ul style="list-style-type: none">• Check the line cord. Connect Telephone Cord.• Call your telephone company to verify that your Caller ID services are active.• You may have too many communication devices hooked to a single line. A communication device can be a phone, modem, or facsimile (FAX) machine.• Contact your telephone company for help in calculating the limit for your residence or business line.
No Dial Tone	<ul style="list-style-type: none">• Verify that the Telephone Cord is plugged in correctly.• Verify that the LINE connection is correct and tightly secured.
No LCD display	<ul style="list-style-type: none">• Replace the battery on the handset• Ensure that the AC adaptor is connected properly.
Remote access to the TAM is not working.	Please ensure that PIN entered is correct.
Can't make calls from the handset.	Check to see if the barring function has been turned on.
Cannot page the handset	Register the handset to the base and try again.

ONE-YEAR LIMITED WARRANTY

MODRO 35

IMPORTANT Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor

The warrantor is Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”).

Terms of Warranty

Uniden Aust warrants to the original retail purchaser only that the Modro 35 (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered

This warranty covers the Product and included accessories.

User-generated Data

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for Obtaining Warranty Service

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Service Division

345 Princes Highway,

Rockdale, NSW 2216

Phone number: 1300 366 895

Email: custservice@uniden.com.au

Uniden®