

# Uniden

## App Cam Solo PT Series

### Quick Start Guide

# What's in the Box



App Cam Solo 4G PT  
x1



Antenna  
x1




Plastic Mount  
x1




Power Cable  
x1



Quick Start Guide  
x1

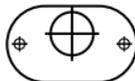

Mounting Template  
x1

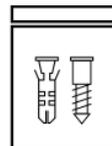

Screw Kit  
x1

## Optional Accessories



Solar Panel  
(SPS-01)

Visit the App Cam Solo PT page on the website for more information on the availability of optional accessories:

[www.uniden.com.au](http://www.uniden.com.au) for Australia

# General Introduction



● Red LED (WiFi connection failed)  
Blinking: Standby status  
On: Working status

● Blue LED (WiFi connection succeeded)  
Blinking: Standby status  
On: Working status

## Install the Antenna



Please install the Antenna to the camera. Turn the antenna base in a clockwise motion to connect. Leave the antenna in a vertical position for best reception.

## Turn on the Camera

The camera is turned off by default, please turn it on before setting up the camera.



### **Note:**

If the camera will not be in use for a very long time, it's suggested to turn it off.

## Charge the Battery



1. Charge the battery with a power adapter.



2. Charge the camera with the optional solar panel.

\* The battery is built-in, please do not remove it from the camera

\* Please note that the USB charger and Solar Panel are NOT included in the package. You can buy the solar panel separately.

## LED Battery Status

There is a status LED under the micro USB port of the camera, indicating the battery charging status.

● Green LED: Fully charged

● Red LED: Charging



## Important Safeguards on Rechargeable Battery Use

App Cam Solo PT is not designed for 24/7 full capacity running or around-the-clock live streaming. It's designed to record motion events and remotely view live streaming only when you need it.

1. Please charge the rechargeable battery with a standard and high-quality DC 5V or 9V battery charger.
2. If you want to power the battery via the solar panel, please note that the battery is ONLY compatible with SPS-01 solar panel. You cannot charge the battery with other solar panel brands.
3. Please charge the battery in temperatures between 0°C and 45°C.
4. Always use the battery in temperatures between -20°C and 60°C.
5. Please make sure the battery compartment is clean.
6. Please keep the USB charging port dry, clean and free of any debris and make sure the battery contacts are aligned.
7. Always make sure the USB charging port is clean. Please cover the USB charging port with the rubber plug after the battery has been fully charged.
8. Never charge, use or store the battery near any ignition sources, such as fire or heaters.
9. Always store the battery in a cool, dry and ventilated environment.
10. Never store the battery with any hazardous or combustible objects.
11. Do keep the battery away from children.
12. Do not short-circuit the battery by connecting wires or other metal objects to the positive (+) and negative (-) terminals. Do NOT transport or store the battery with necklaces, hairpins or other metal objects.
13. Do NOT disassemble, cut, puncture, short-circuit the battery, or make it dispose of in water, fire, microwave ovens and pressure vessels.
14. Do NOT use the battery if it gives off an odor, generates heat, becomes discolored or deformed, or appears abnormal in any ways. If the battery is being used or charged, remove the battery from the device or the charger immediately, and stop using it.
15. Always follow the local waste and recycle laws when throwing the used battery away.
16. All rechargeable batteries are consumables and have a limited lifespan—eventually their capacity and performance decline.

## Install Uniden Solo App

There are two ways to get the Uniden Solo App:

- Search “Uniden Solo” in App Store (for iOS), download and install the app.
- Search “Uniden Solo” in Google Play (for Android), download and install the app.

## Set up the Camera

Please follow the prompt tone to configure the camera

“ Camera has been started up. Please run app, add the camera and set it up. ”



1. Please click the “ + ” button in the top right corner to add the camera.



2. Scan the QR code on the back of the camera.




3. Click "Connect to Wi-Fi" to continue.

**Note:**


When the setup for the camera is completed, your family can access the camera simply by clicking "Access Cameras" without reconfiguring it.

App Cam Solo PT Camera can only connect to 2.4GHz Wi-Fi.

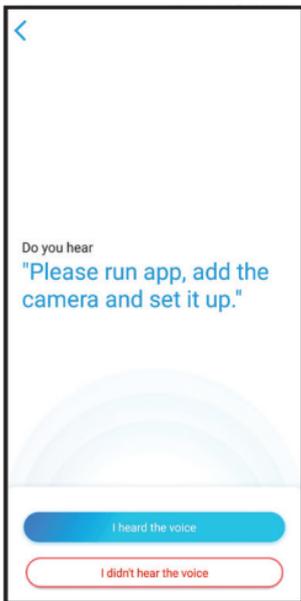


4. Click the button "I heard the voice" to enter the next page.

If you did not hear the voice prompt, please press "I didn't hear the voice" for help.

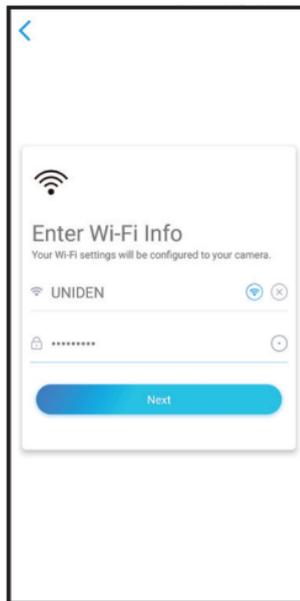


5. Enter the Wi-Fi password of the selected Wi-Fi network and tap "Next" to continue.

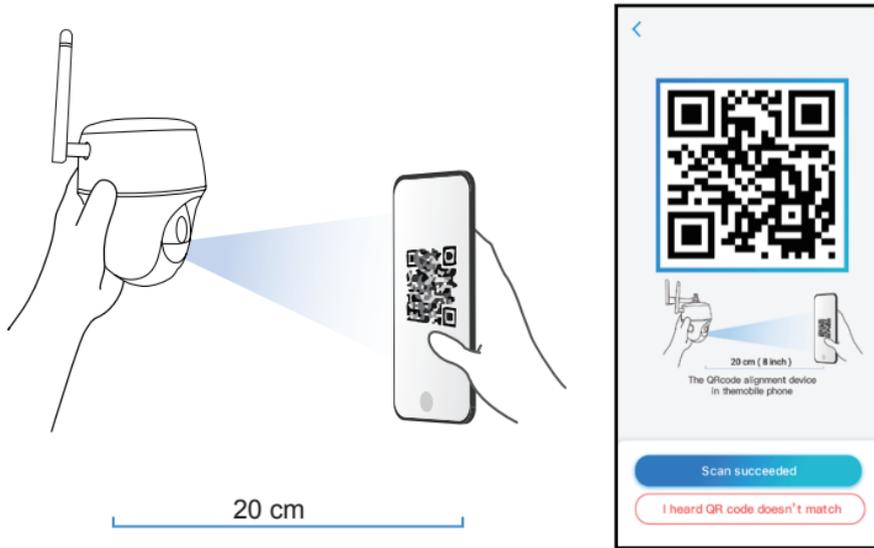

“ Scan succeeds. Camera is connecting to the router. Please wait. ”

6. A QR code will be generated on the phone. Please place the QR code on your phone towards App Cam Solo PT camera' lens at a distance of about 30cm to let the camera scan the QR code. Please make sure that you've ripped the protection film of the camera's lens.

**Note:** To help scanning, please tap the QR code to display in full screen



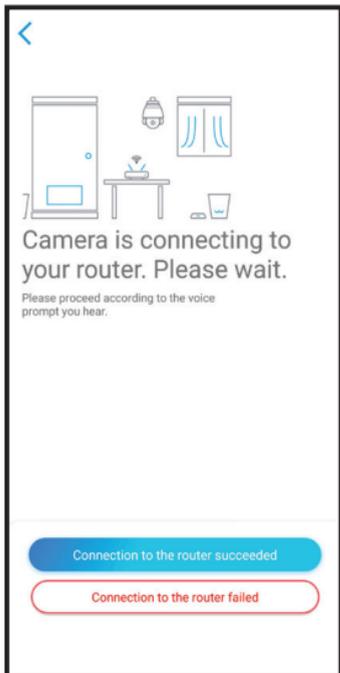


“ Connection to the router failed! ”

7. If you hear the above voice prompt, please press “I heard ‘Wi-Fi connection failed’ ” for help.

“ Connection to the router succeeded. ”

8. If you hear the above voice prompt, please press “I heard ‘Connection to the router succeeded.’ ” to finish the quick setup.

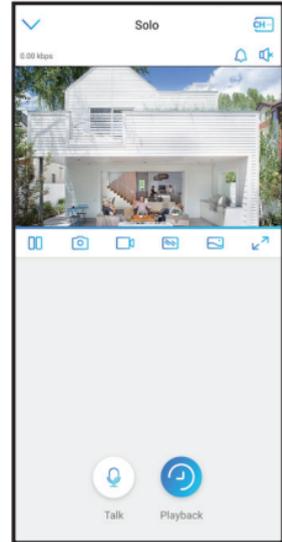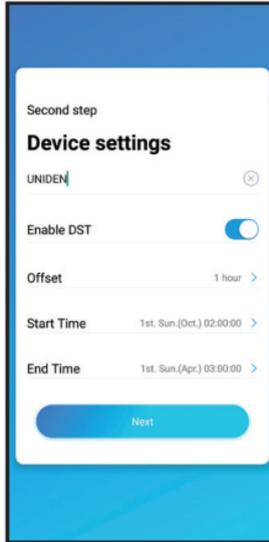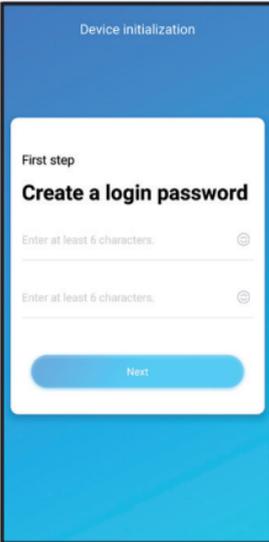

9. Create a password (at least 6 characters), name the camera and set the DST time. Then start live view or go to “Device Settings” for more configurations.

**Note:**

“Name your camera” field refers to the display name of the camera rather than the login username.

# Device Menu



Menu



Add New Device



Enable/Disable PIR Motion Sensor  
(the PIR sensor is enabled by default)



Device Settings



Access Live View



Battery Status

## Attention for Camera Installation

For outdoor use, please install the App Cam Solo PT upside down in order to maximize the weatherproof performance and the PIR motion sensor's efficiency.

For indoor use, the camera can be placed upright, but please make sure to place it at a maximum of 2.5 meters from the ground.

### • PIR Sensor Detecting Distance

The PIR sensor has 3 sensitivity levels for your adjustment: Low/Mid/High.

Higher sensitivity offers longer detecting distance. The default sensitivity of the PIR sensor is at "Mid".

Path for adjusting distance in App: Device settings-PIR settings

Sensitivity	Value	Detecting Distance (For moving and living things)	Detecting Distance (For moving vehicles)
Low	0 - 50	Up to 4 meters	Up to 10 meters
Mid	51 - 80	Up to 6 meters	Up to 12 meters
High	81 - 100	Up to 10 meters	Up to 15 meters

**Note:**

Higher sensitivity offers longer detecting distance, but it would lead to more false alarms.


You are advised to set up the sensitivity level to "Low" or "Mid" when you install the camera outdoors.

## • PIR Sensor Installation Angle

Please install the camera 2-3 meters above the ground. The detection range of the motion sensor would be maximized at such a height.

For effective motion detection, please install the camera angularly and the angle between the PIR sensor and the detected object must be larger than  $10^\circ$ .

Due to the limitation of PIR sensor detection, if a moving object approaches the PIR sensor vertically (the direction of the orange arrow in the image), the camera may fail to detect motion.

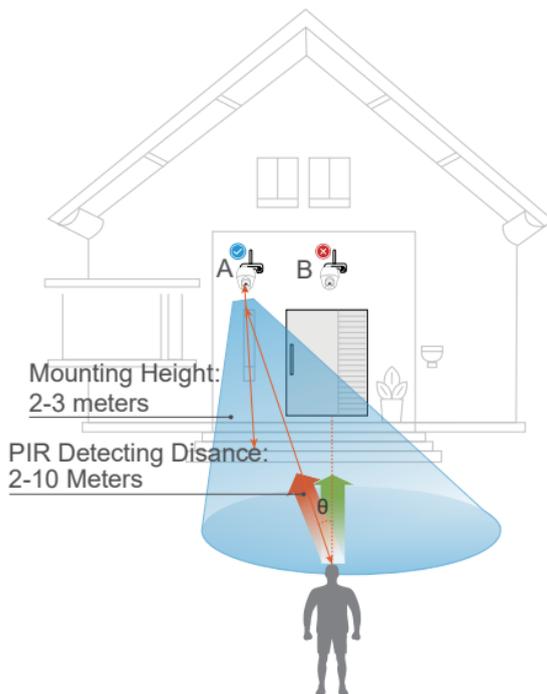



## Important Notes for Reducing False Alarms


### For reducing false alarms, please note that:

- Do not install the camera facing any objects with bright lights, including sunshine, bright lamplights, etc.
- Do not place the camera too close to a place where there are frequently moving vehicles. The recommended distance between the camera and the vehicle is 15 meters
- Stay away from the outlets, including the air conditioner vents, humidifier outlets, the heat transfer vent of projectors, etc.
- Do not install the camera facing the mirror.
- Do not install the camera where there are strong winds
- Keep the camera at least 1 meter away from any wireless devices, including Wi-Fi routers and phones in order to avoid wireless interference.

### Note:


- When in rotating status, the camera will record motion detection videos when the PIR sensor is triggered, but will not send any push or email notifications.

## How to Install Plastic Mount

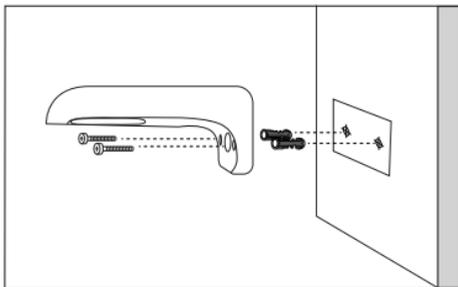


### Step 1

Drill holes in accordance with the mounting hole template and screw the plastic mount to the wall. If you are mounting the camera to a masonry or on any other hard surface, remember to insert the plastic anchors into the hole.

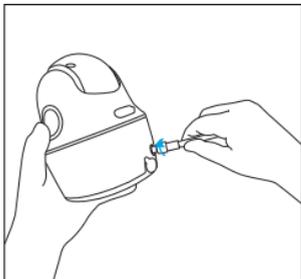

### Step 2

Install the antenna to the camera.

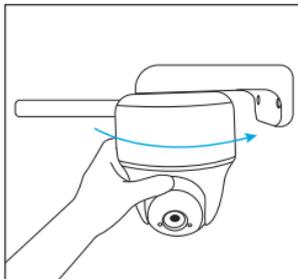

### Step 3


Screw the camera to the security mount and adjust to the proper direction.

### NOTE:

For better 4G signal strength, it is best to install the antenna upwards or horizontally.



## How to Mount the Camera to the Ceiling

Loosen the screw on security mount and remove the ceiling bracket from the mount.

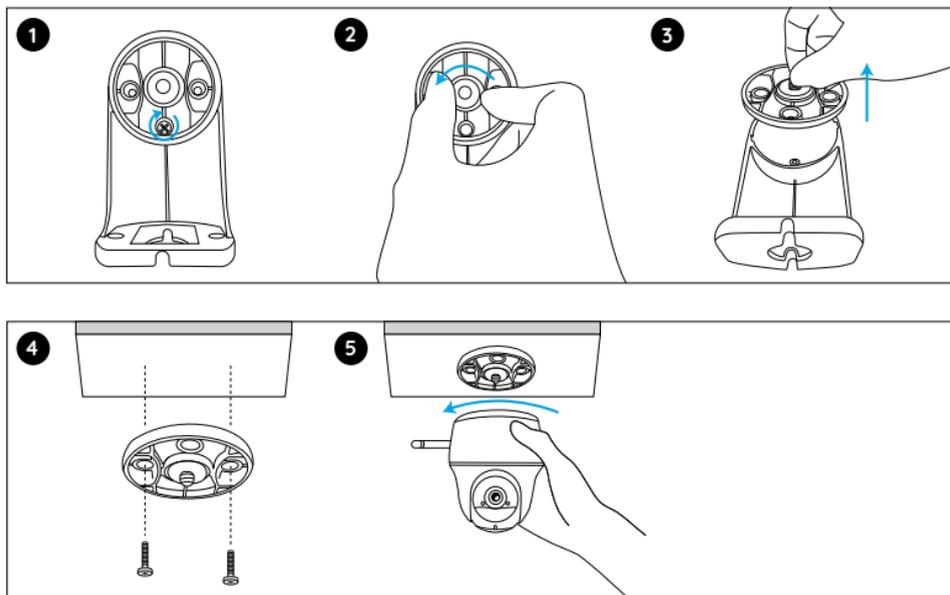

## How to Attach the Camera to a Tree

You are allowed to strap the camera to a tree with both the security mount and ceiling bracket. Thread the provided strap to the plate and fasten it to a tree. Next, attach the camera to the plate and you are good to go.

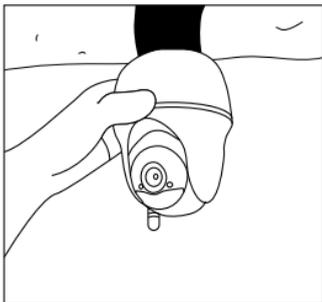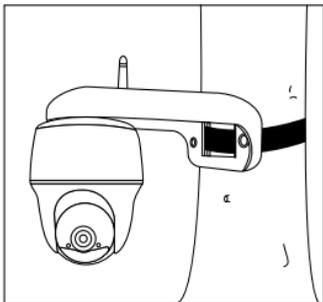



# Specification

	<b>Model</b>	<b>App Cam Solo PT</b>
<b>Video</b>	Image Sensor	Starlight CMOS Image Sensor
	Video Resolution	1920 x 1080 (2.0Megapixel) 15 fps
	Video Compression	H.264
	Viewing Angle	Diagonal: 105°
	Pan Angle	355°
	Tilt Angle	140°
	PIR Detecting Distance	Low: 2-4 Meters, Mid: 4-6 Meters, High: 6-10 Meters
	PIR Detecting Angle	Horizontal: 90°
	Night Vision	Up to 10 Meters
	Standby Wake Up	PIR Alarm, Remote Access, Reset Button
	Record Mode	PIR Alarm Record
<b>WiFi</b>	WiFi	2.4 GHz IEEE 802.11b/g/n
	Wireless Security	WPA-PSK/WPA2-PSK
<b>Battery</b>	Battery Type	Lithium battery/3.6V, 6500mAh
	Battery Life	Up to 3 Months in Standby Mode with one detection a day

<b>Storage</b>	SD Card	Supports up to 64GB micro SD card, min class 10
<b>Size &amp; Weight</b>	Size	Φ98 x 112 mm
	Weight	470 g (including battery)
<b>Other Parameters</b>	Temperature	Operating Temperature : -10°C~+55°C
	Humidity	Operating Humidity: 20% ~ 85%
	Waterproof Level	IP64 Weatherproof

# WARRANTY

## Uniden App Cam Solo PT

### Important:

**Satisfactory evidence of the original purchase is required for warranty service.** Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

### Warrantor:

The warrantor is Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”).

**Terms of Warranty:** Uniden Aust warrants to the original retail purchaser only that the Uniden App Cam Solo PT (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

**Warranty Period:** This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire, as indicated below, from the date of original retail sale.

Product	2 Year
---------	--------

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- A. Damaged or not maintained in a reasonable manner or as recommended in the relevant Owner’s Manual;
- B. Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust;
- C. Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- D. Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- E. Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

**Parts Covered:** This warranty covers the Product and included accessories.

**User-generated Data:** This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

**Statement of Remedy:** If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

**Procedure for Obtaining Warranty Service:** Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden. Please refer to the Uniden website for address details. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

#### **UNIDEN AUSTRALIA PTY LTD**

Phone number: 1300 366 895

Email address: [custservice@uniden.com.au](mailto:custservice@uniden.com.au)





**THANK YOU FOR BUYING A UNIDEN PRODUCT**

© 2019 Uniden Australia Pty Limited v1.0  
Printed in PRC